


VARIOUS QUICK-DISCONNECT COUPLINGS NORMALLY USED ON SUPPLIED-AIR RESPIRATOR SYSTEMS

3/4" MPT*
(P/N 80322)

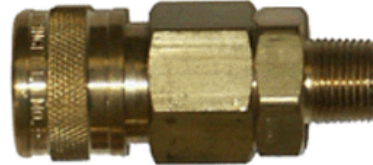

1/2" MPT
(P/N 80107)



3/8" MPT*
(P/N 80323)

1/2" INDUSTRIAL INTERCHANGE SERIES
(ALSO KNOWN AS 1/2" FOSTER-HANSON)

3/8" MPT*
(P/N 80021)



3/8" MPT*
(P/N 80321)

3/8" INDUSTRIAL INTERCHANGE SERIES
(ALSO KNOWN AS 3/8" FOSTER-HANSEN)

3/8" MPT*
(P/N 80290)



3/8" MPT*
(P/N 80022)
1/8" MPT*
(P/N 80282)

1/4" INDUSTRIAL INTERCHANGE SERIES
(ALSO KNOWN AS 1/4" FOSTER-HANSEN)

1/4" MPT*
(P/N 80349)



3/8" MPT*
(P/N 80166)
1/8" MPT*
(P/N 80276)

1/4" SCHRADER-TYPE SERIES

1/4" MPT*
(P/N 80371)



1/4" MPT*
(P/N 80370)

1/4" SNAP - TITE TYPE SERIES

* STOCKED BY MST